

## Direct TV / RCA Receiver

Turn on the TV and the RCA Directv receiver. TV should display “Searching for satellite” on the bottom of the screen. If you do not see this then check that the TV is set to the correct channel and that the video source selector is set to the correct source.

1. Using the remote control for the satellite receiver navigate to the “Signal Meter” screen on your receiver. (Most receivers this is done by pressing MENU > 7 > 4 > 5)
2. Once you are on the “Signal Meter” Screen set the “Transponder” at number 2. This is done by highlighting the “+” or “-“ and then pressing “OK” to move the transponder up or down until you get it set at 2.
3. Now you are ready to start the search process. On the King Dome control console press and hold the “ON/SEARCH” button down for a complete 4 seconds to start the search. The status LED will blink red and green for up to 1 minute and then will turn to a steady blinking red LED.
4. The status LED will begin to blink green when a potential satellite is found. Once the status LED is solid green the dome is locked onto a satellite. If there is 0 current signal strength on the meter then you will need to continue searching by pressing the “ON/SEARCH” down for 1 second. Once you have a solid green status LED and signal strength on the meter you are on the correct satellite and the control console can be turned off.
5. Now that you are locked onto the correct satellite you are ready to view the picture. Using the RCA receiver remote control press the “GO BACK” button 4 times to exit out of the menus. Once you are back to the main screen the TV will display “Satellite Acquisition In Progress”. Once the meter is to 100% it may take a minute for the picture to come on. (If picture does not come on in 5 minutes call DirecTV technical support.)