

King Dome / Dish Receiver Setup

1. Turn on the TV and Dish Network satellite receiver. The TV should display “Acquiring Satellite Signal”. If it does not make sure that the TV is set to the correct channel and that there is a good connection between the satellite receiver and the TV.
2. Once the TV and the satellite receiver are turned on navigate to the “Point Dish Signal Strength” screen. On most receivers this is done by pressing “Menu > 6 > 1 > 1” on the remote control.
3. Once you are on the “Point Dish Signal Strength” screen you should see an option on the right side of the screen that reads “Check Switch”. If you do not see this option, press the “Cancel” button on the remote control and then choose the option that reads “Multi-Dish Install”.
4. Now that you are on the screen that has the “Check Switch” option, disconnect the cable that is connected to the “Satellite In” port on the back of the receiver.
5. Once the cable is disconnected, select “Check Switch” with your remote control. When prompted select “Check” to start the switch test. When the test is done it will display the “Installation Summary”, press select to return to the “Point Dish Signal Strength” screen.
6. Reconnect the coaxial cable you removed earlier to the “Satellite In” port on the back of the receiver. Now you are ready to do a search for the satellite.
7. When your dome is pointed at the 119 satellite, turn it off with the remote control and wait for 40 minutes and it will download the newest software to your receiver. (If you need help getting locked onto the 119 satellite refer to the updated search instructions that can be downloaded from the website.)