

## **Dish Network / King Dome Instructions**

1. Turn on the TV and Dish Network satellite receiver, the TV should display “Acquiring Satellite Signal”. If the TV does not display this make sure TV is set to channel 3 and that there is a good connection between the TV and the satellite receiver.
2. Using the remote control for the satellite receiver, navigate to the “Point Dish / Signal Strength” screen. (With most receivers this is done by pressing, Menu > 6 > 1 > 1.)
3. With the remote control for the satellite receiver select the 119 satellite on the left-hand side of the TV screen and change the “Transponder” to 19.
4. Using the King Controls Single Switch Console, press and hold the “ON/SEARCH” button for 4 seconds to initiate the search process. Once the search is initiated you will see a series of red and green flashes on the “STATUS” LED. It will change to a steady red blinking LED once the dome has completed all of the startup checks and has begun to search for the satellite.
5. Once you have a solid green “STATUS” LED look at the very bottom of the TV screen to verify that you are locked onto the Echostar 119 satellite. If it displays “Not Locked” or “Wrong Satellite” then press the “ON/SEARCH” button for 1 second to continue the search pattern. Repeat this step until you are locked onto the 119 satellite.
6. Now that you are locked onto the Echostar 119 satellite you can press the “View” button on the satellite receiver remote control to view your subscribed programming. If you get any type of error messages please return to the “Point Dish / Signal Strength” screen and run through the “Check Switch” test.